

Gikoka TBH370 TIME SWITCH


OPERATING INSTRUCTIONS

- ON-OFF SETTING PIN
INSIDE ON
OUTSIDE OFF
MINIMUM SETTING INTERVAL
IN MINUTES

- TIME ADJUSTING KNOB

- TIME INDICATOR

- POWER TERMINAL
100V~250V AC
50HZ/60HZ

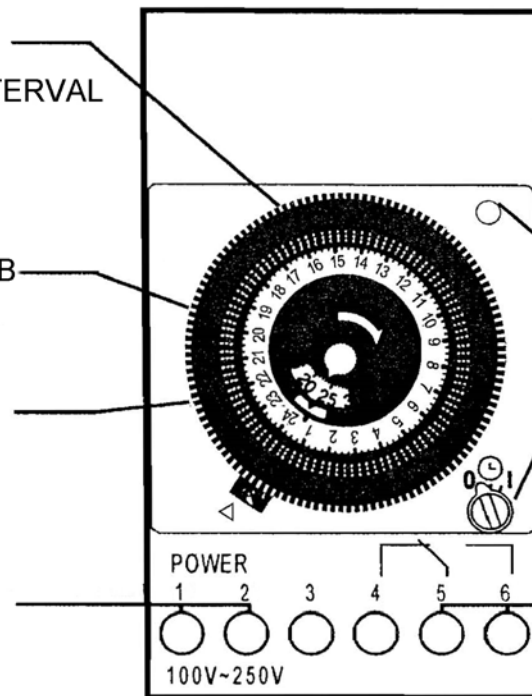

- RECHARGEABLE BATTERY
BUILT IN.
- BACK UP BATTERY FOR
150 HOURS WHEN POWER
FAILURE. (JUST FOR CLOCK
RUNNING)

- POWER INDICATOR

- HANDY ON/AUTO/OFF
SELECT SWITCH
0 - MANUAL OFF
⌚ - AUTO
I - MANUAL ON


- LOAD TERMINAL
RESISTIVE LOAD 250V/16A

CAUTIONS

- ★ For the first time, please charge battery first till running (hear DI DA Sound) it will take about 10 mins to 3 hrs before use.
- ★ To set the correct time, turn the dial in the direction of the arrow (clockwise) and set the present time.
- ★ Please observe the rated voltage and voltage tolerance of the time switches for adequate use.
- ★ If the load capacity exceeds the rating, an electromagnetic switch is required.
- ★ Do not use the time switch where:
 - the ambient temperature goes below -10°C or above $+50^{\circ}\text{C}$
 - there is much dust.
 - there is much moisture.
 - outdoors or where it will be exposed to rain or water.
 - there is much vibration.

WIRING CONNECTION DIAGRAM

- FOR LIGHT LOAD

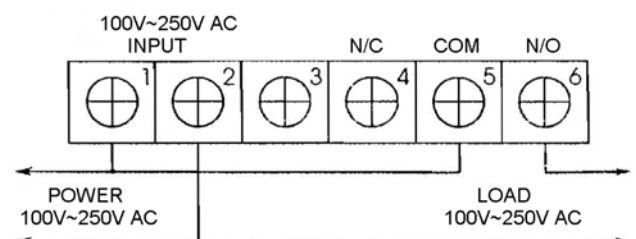

- FOR HEAVY LOAD

